

10.4" & 8" Digital and Analogue TV

Advice / Guidance

Chrome aerial is for Analogue TV reception only.

Black aerial is for both Digital and Analogue TV reception.

In weaker signal transmission areas or poor reception areas we recommend that you use an alternative aerial – see Vision Plus range at your nearest leisure dealer.

There is a power on/off switch on the right hand side of the unit.

Switching between analogue and digital TV is achieved by pressing either the right hand button on the front of the TV or the "TV/AV" button on the remote control – Digital TV mode is indicated by DTV displayed in the top left of the screen – Analogue TV mode is indicated by PAL displayed in the top left of the screen.

Analogue TV in the UK is PAL I – please ensure the sound system is set to "I" by pressing the menu button, select "Preset", select "Sound-Sys" and switch it to "I" – other sound modes are for use outside the UK.

Please note that Digital TV / Freeview is not available in all areas of the UK – check the coverage by logging onto www.freeview.co.uk, text your postcode to 83331 or tel 08708 80 99 80 – it is planned that full coverage will be achieved by 2012.

Re tuning is necessary when setting the TV up in a different geographical location.

Quick Tuning Guide

Setting Up Analogue TV

1. Ensure you have selected the correct mode via the **TV/AV button** on the remote control – you should see "**PAL**" or "**SECAM**" appear in the top left corner of the screen.
2. Once you have selected the correct mode press the **menu** button.
3. Press the **down arrow** button to highlight "**Preset**" and then press the **right arrow** button to select.
4. Ensure the "**Sound**" is set to "I" by using the arrow buttons.
5. Using the **up** or **down arrow** buttons highlight the "**Auto Search**" and press the **right arrow** button to select.
6. The TV will now automatically search for all available channels. **P.T.O.**

Setting Up Digital TV

First Time Installation

1. Ensure you have the black aerial supplied or a suitable digital aerial connected (Vision Plus range recommended).
2. Ensure you have selected the correct mode via the **TV/AV button** on the remote control – you should see “**DTV**” appear in the top left corner of the screen.
3. The “**First Time Installation**” menu will appear – using the **arrow buttons** select “**Yes**” by pressing the **OK button**.
4. Ensure the menu options are correct “**Country**”, “**Language**” and “**Time**” (these options can be changed using the **arrow buttons**).
5. Select “**Next**” and press **OK button**.
6. You will now be asked “**Do You Want To Start Auto Search?**” Select “**Yes**” and press **OK button**.
7. The TV will now search for all available Digital TV and Radio channels.

Re-Tuning

Only necessary when the TV is being used in a different geographical location!

Simply press the **Search button** and follow the on screen prompts by using the **arrow** and **OK buttons** respectively.